

BORE GAUGES ALESAMETRI


- Mobile tip in MD (WIDIA) integrale and radiused
- Interchangeable fixed tips with sphere MD (Widia)
- Ø8 mm dial guage clamping shank
- Probe recall (also touchpad recall on model Aleso CAS)
- Handle with insulation chamber
- Supplied with dial guage 0,01 Ø60
- Aluminium protection for the dial gauge (PROTI) on request

- Puntale mobile MD (WIDIA) integrale raggato
- Puntali fissi intercambiabili con sfera MD (Widia)
- Attacco per comparatore Ø8 mm
- Richiamo tastatore (anche del palpatoio nella versione Aleso CAS)
- Impugnatura con camera di isolamento
- Di serie comparatore 0,01 Ø60
- Protezione in alluminio per il comparatore (PROTI) su richiesta



Aleso RC

Manual sphere release
Richiamo manuale delle sfere

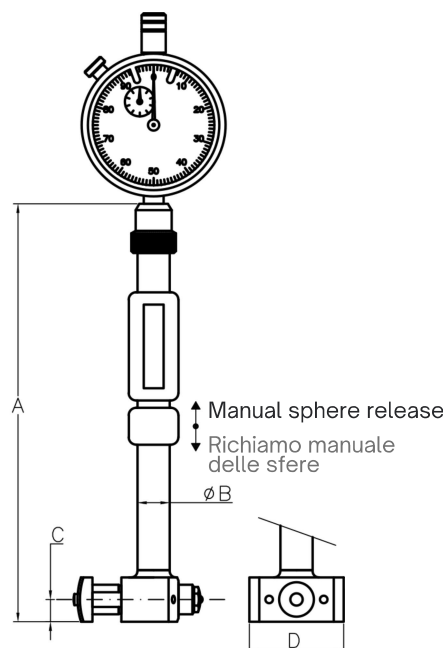

Puntale mobile integrale
in widia raggato

Integral mobile tip
in widia radiused



Aleso CAS

Manual recall of the
mobile tip and the
touchpad

Richiamo manuale
del puntale mobile e
del palpatoio



Article	Range (mm)	Hole depth (mm)	Number of fixed tips	Number of washers	Extensions quantity (length) (mm)	A (mm)	B (mm)	C (mm)	D (mm)	Mobile tip movement (mm)	Accuracy µm*	Repeatability µm	CODE	Kg
ALESO RC 30-100	30 - 100	60	5	3	2(25)	165	13	7	25	2.3	±1	1	D00210	0.160
ALESO RC 50-160	50 - 160	60	6	3	1(25) - 1(55)	170	13	9	38	3.3	±1	1	D00215	0.190
ALESO RC 100-300	100 - 300	100	6	2	1(50) - 1(100)	245	15	10	66	3.5	±1	1	D00225	0.400
ALESO CAS 50-160	50 - 160	170	6	3	1(25) - 1(55)	305	13	9	38	6.0	±1	1	D00230	0.300

*Precisione su un'escursione di 0,5 mm (escluso comparatore)

*Accuracy on 0,5 mm measuring travel (excluding dial guage)